


WOOD STOVE INSTRUCTIONS

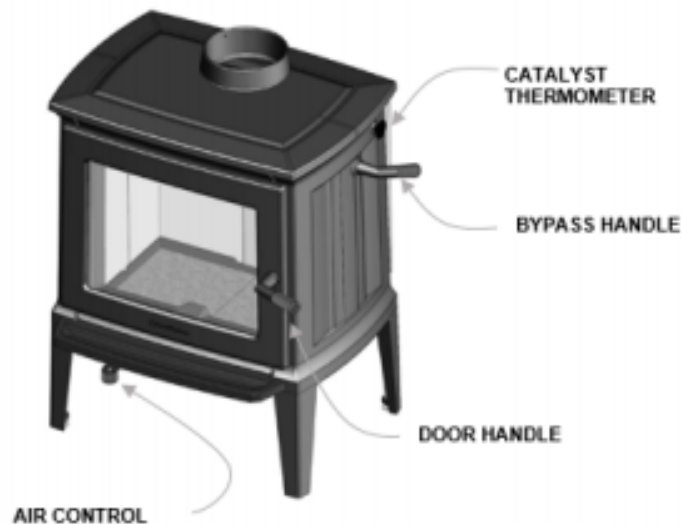

Pull the bypass handle on upper right side of stove forward, and pull air control/damper knob on front of stove all the way out. Scoop out excess ashes into the metal bucket provided, and make sure to put the lid back on. It is important to keep ashes cleared away from the front edge of the stove and the air control intake.

Load the stove as follows:

2 or 4 large pieces of wood on the bottom, a generous amount of kindling on top, 4 – 6 sticks of fatwood on top of that, followed by several sheets of crumpled newspaper.

A torch is provided for easy lighting: turn the dial on the torch to the left and immediately press the trigger to ignite it. Light the paper and fatwood using the torch, and then close the door, leaving it cracked open about 2 cm.

Keep an eye on the fire, leaving the door cracked open until the fire is well established. **DO NOT LEAVE THE WOOD STOVE UNATTENDED WITH THE DOOR OPEN.**

When the needle on the catalyst thermometer enters the “CATALYST ACTIVE” zone, move the bypass handle to the closed position (push it back towards the wall). Adjust the air control as needed (when it is really cold, you will probably need to run the stove with the air control all the way out, and you will need to add more wood more frequently). Pushing the air control all the way in will make the fire burn more slowly.

